

PFU-260	
BELT, DRIVE	562-32-01
BRACKET FOR LOWER SEPERATOR ROD (at rear)	568-20-24
BRAKE ADJUSTER (metal tab under locking collar)	10-40347
BRAKE ADJUSTING COLLAR W/SET SCREW	557-07-08
BRAKE DRUM	10-40718
BRAKE SPRING (TENSION ADJUSTER)	562-70-60
BRAKE STRAP	10-40450
COLLAR FOR SEPERATOR ROD (top front)	10-40386
DANCER BAR (motor start/stop roller)	10-40354
DANCER BAR PIVOT ARM MOUNTING COLLARS	557-07-08
DANCER BAR PIVOT ARMS (2)	10-40350
DANCER BAR STOPS (aluminum w/rubber bumper)	
DRIVE ROLLER (RUBBER COVERED)	562-66-20
DRIVE ROLLER BEARING FLANGE	560-70-10-02
DRIVE ROLLER BEARINGS	560-70-10-01
DRIVE ROLLER SPROCKET	562-22-08
FILM CRADLE FLANGED COLLARS (film position)	10-40310
FILM CRADLE ROLLERS (2)	562-66-21
FILM SEPERATOR ROD (2)	10-40756
FILM SEPERATOR ROD THUMB SCREW (2)	568-20-24
FUSE HOLDER W/ FUSE	10-40756
FUSE 1 AMP	600-62-12
IDLE ROLLERS adjustable position (on sliding brackets)	562-66-22
IDLE ROLLERS FIXED POSITION (3)	562-66-23
IDLE ROLLERS, SLIDING BRACKET	10-40383
INVERTING PLOW 12"	10-41471-01
INVERTING PLOW 15"	10-41471-02
INVERTING PLOW 18"	10-41471-03
MOTOR, DRIVE	10-40763
PINCH ROLLER SHAFT	10-40367
PINCH ROLLER SHAFT PIVOT ARM MOUNTING BOLTS	540-30-70
PINCH ROLLER SHAFT PIVOT ARMS (2)	10-40346
PINCH ROLLER SPACER LOCKING W/SET SCREW	557-07-08
PINCH ROLLER SPACERS (2" WIDE NYLON ROLLER)	10-51071
PINCH ROLLER SPRING MOUNTING STUDS	10-40615-02
PINCH ROLLER SPRINGS	562-70-21
PINCH ROLLERS W/O RINGS	10-51299
POWER CORD	10-40394
RECTIFIER	10-40759
RELAY	610-50-32
RELAY MOUNTNG BLOCK	600-30-31
RESISTOR	10-40794
SET SCREWS	540-22-25
SPROCKET, DRIVE MOTOR	562-22-06
SWITCH, MICRO (motor start/stop switch at dancer bar)	610-18-38
SWITCH, ON/OFF TOGGLE	10-40793
TERMINAL STRIP	600-50-11