

T-15-12 & T15-9	
NOTE: (drive roller)	part #
1/2 shaft must be replaced with 5/8 requires roller, 2 bearings, 4 flanges and sprocket on drive roller	
DRIVE ROLLER (5/8" shaft)	562-66-25
FLANGES FOR DRIVE ROLLER BEARING	560-70-10-02
SPROCKET, DRIVE ROLLER 5/8 BORE	562-22-08
BEARING, DRIVE ROLLER 5/8 BORE	560-70-21
BELT, CONVEYOR MESH (13")	10-19507-01
BRACKET, HEATER MOUNTING TO BLOCK	10-19671
BRUSHES FOR CONVEYOR MOTOR	640-45-11
CLAMP FOR BRACKET	600-92-03
HEATER ELEMENTS 1500 W. 220 V (6 per machine)	OBSOLETE
HEATER ELEMENTS 1500 W. 240 V (6 per machine)	640-60-71
HEATER MOUNTING BLOCK	10-19670
IDLER ROLLER	562-66-06
LOUVER, SIDE AIR VENTS INSIDE TUNNEL FRONT	560-70-02
LOUVER, SIDE AIR VENTS INSIDE TUNNEL REAR	562-22-06
SEALANT HIGH TEMP RTV	573-10-02-01
SPROCKET, ON CONVEYOR MOTOR	562-22-06
WIRE, HIGH TEMP (PER FOOT)	605-12-02
NOTE:	

MOTOR, CONVEYOR W/ GEAR BOX	615-40-11
prior to 1998 models must use conversion KIT	10-54343
(kit includes new permanent magnet motor & mounting bracket)	
RISER BAR (inside tunnel under conveyor belt)	10-19574-01
CONTROLLER BELT SPEED CONTROL & KIT	10-54344
(kit replaces all prior controllers & contains all hardware & instructions)	
BASE, sliding mount for blower motor	10-19935
BEARING MOUNTING PLATE, blower shaft- front	10-19359-01
BEARING MOUNTING PLATE, blower shaft- rear	10-19359-02
BEARING, BLOWER WHEEL SHAFT	560-70-24
BELT V, motor to blower wheel shaft	562-36-06
BOLT, CONVEYOR BELT TENSION ADJUSTER	527-68-40-01
BELT, TIMING DRIVE ROLLER TO conveyor motor	562-32-02
BLOWER WHEEL, (squirrel cage)	10-19409
BLOWER WHEEL, HOUSING,	10-19882
BRACKET, CIRCUIT BREAKER MOUNTING	610-30-18
CIRCUIT BREAKER 1 PH 50 AMP	610-70-19
CIRCUIT BREAKER 3 PH 30 AMP	610-70-28
CONTACTOR, MERCURY 1 PH 50 AMP	610-24-22
CONTACTOR MERCURY 3 PH 60 AMP	610-60-17
CONTACTOR, MAGNETIC 1 PH 50 AMP	610-60-11
CONTACTOR, MAGNETIC 3 PH 60 AMP	610-60-16
CONTROL KNOB RECTANGULAR BELT SPEED	568-30-02
CRANK HANDLE, BLOWER SPEED ADJUSTMENT	10-40133-20
FUSE 1 AMP SLO-BLO HEAT & BELT	600-62-12
FUSE HOLDER	10-21634
GRILLE, ACCESS COVER FRONT	10-19884
GRILLE, ACCESS COVER REAR	10-19506
IDLER ROLLER	562-66-06
LIGHT , MAGNETIC CONTACTOR INDICATOR	625-60-30
LIGHT HEAT INDICATOR (3 PH)	625-60-29
LIGHT, TRANSFORMER INDICATOR	625-60-31
MOTOR, BLOWER AC	615-22-28
PANELS, INSULATION MUST BE CUT TO FIT	502-70-03
PLATE blower housing cover	10-19883
PULLEY, BLOWER WHEEL	10-19957
PULLEY, variable pitch (mounted to blower motor)	562-26-05
SHAFT, BLOWER WHEEL	10-19493-01
CONTROL KNOB ROUND BELT SPEED	568-01-43
SHAFT, speed adjusting handle to motor base	10-19498
TERMINAL STRIP TB-1	600-50-10
U-JOINT, flexible coupling on speed adjuster shaft	10-19501
TEMP CONTROLLER (FENWAL)	660-20-14

"A-2 MODEL" Quantum (discontinued) requires replacement to FENWAL CONTROLLER (upgrade kit, contactor & light)	
CONTACTOR, MERCURY	610-24-22
LIGHT, HEAT INDICATOR	625-60-23
UPGRADE KIT	10-40901
KIT INCLUDES:	
VARIABLE RESISTOR 1KOHM 3WATT	631-05-51
KNOB	660-20-14-01
SENSOR (FENWAL ONLY) Absolute: change to digital	660-20-15
TEMP CONTROLLER	660-20-14
DIFFL PLATE	660-20-14-02
DIGITAL TEMPERATURE CONTROL (LOVE)	610-22-28
TEMPERATURE PROBE FOR ABOVE	610-22-29
LEGS, ADJUSTABLE LEFT	10-19594-02
LEGS, ADJUSTABLE RIGHT	10-19594-01
CURTAINS T-15-12 MIDDLE 1 PER PACK PER SIDE	10-19669-11
CURTAINS T-15-12 OUTSIDE 2 PER PACK PER SIDE	10-19669-13
CURTAINS T-15-9 MIDDLE 1 PER PACK PER SIDE	10-19669-05
CURTAINS T-15-9 OUTER 2 PER PACK PER SIDE	10-19669-07
PANELS, INSULATION 3 REQUIRED	502-70-03
METAL FASTENERS-INTERNAL STRAPS	10-19502
SWITCH, ON/OFF	610-14-09
LIGHT TEMP INDICATOR (AMBER)	625-60-23
SENSOR,TEMP	660-20-15
SENSOR, MOUNTING BLOCK (older units)	10-19503
SENSOR MOUNTING (new rtv high temp sealant)	573-10-02-01
PANEL, TOP	10-18400-21